



## TW 402

### Pump assembling and Electrical connection

As at: 05/13/08 Time:19:33

<b>Pos.</b>	<b>Description</b>	<b>Reference</b>
01	Angled connector 1/4"	P...541 I
02	Hexagon nut 3/8"	P...535 B
03	Sealing washer 30/17x2 mm	P...097
04	Hose 6/8x90 mm	041.054
05	Clean water filter	P...528
06	Fixing washer 35,3x17x1,5 mm	P...098
07	Reducer 3/8"-1/4"	P...535 A
08	Hose clamp 13,3 mm	P...550 I
09	Hose 6/12x370 mm	041.952
10	Hose connecting nipple	041.910
11	PU hose 350 mm	041.951
12	Hose clamp 14,5 mm	P...550 A
13	PVC hose 170 mm	041.950
14	Hose nipple 1/4"	P...524 F
15	Coupling	P...500 A
16	Bottom plate	041.501
17	PVC hose 120 mm	042.414
18	Y-piece 6 mm	P...542 D
19	PVC hose 95 mm	042.415
20	PVC hose 135 mm	042.413
21	Grommet	P...207 A
22	NDS-WX pump	041.901
22a	Switch	030.367
22b	Switch	041.970 A
23	PU hose 350 mm	041.951
24	Hose clamp 9,0 mm	P...553 B
25	Pan head screw M 6x12 mm	P...475 T
26	Left pump holder	041.920
27	Right pump holder	042.920
28	Mains cable SEV (CH), 3x1,5x7,5m	P...275
28	Mains cable VDE 3x1,5x7,5m	P...276
29	Cable holder	041.402
30	Switch	041.301
31	Cable clamp	P...279
32	Cable protection	P...280
33	Counter nut PG 9	P...279 H
34	Switch	124.313
35	Distribution box housing	P...377 C
36	Distribution box cover	041.350
37	Blind rivet 3 mm	P...485 J
38	PT screw KA 30x14 mm	P...516 S
39	Marking plate	P...390
40	Connection block (3)	P...383 A
41	Gasket	124.323